

NANNI DASHBOARD

USER MANUAL

DGBXXT09061

DIGITAL
SI-5

nanni

TRACKED CHANGES

[illegible]

*Please note all changes and pages associated.
For further clarity, please add a line in front of each change.*

NOTES

S00 SUMMARY

Q00 TRACKED CHANGES	3	S06 SYSTEM SETTINGS	31
TRACKED CHANGES	3	SYSTEM SETUP	31
S00 SUMMARY	5	Engine/battery setup	31
S01 INTRODUCTION	7	Tanks setup	31
INTRODUCTION	7	Set scales	32
About this manual	7	Offsets	32
Before using your SI-5	7	Adjusting the speed correction factor	33
Contents & updates	7	Service reset	33
S02 SAFETY	9	Speed reference	33
WARNING & NOTICES	9	NETWORK SETTINGS	34
Important definition	9	Data source selection	34
Electrostatic discharge awareness	10	SENSOR CONFIGURATION	35
Electrical wiring	10	Configuring a sensor	35
Connections to engine	10	Calibrate the sensor	37
Serviceable parts	10	S08 ALARMS	41
Battery charging device	10	ALARMS	41
Waterproof connectors knobs	10	Alarm / warning notification	41
SAFETY INFORMATION	11	Alarm and warning icons	41
Safety during installation	11	Alarm snooze	42
Safety after installation	11	Active alarms	42
Electrical connection	12	Setup a local alarm	43
S03 PRESENTATION	11	Supported local alarms	44
PRESENTATION	11	Service notification	45
Si-5 presentation	11	Configure nmea 2000	46
GETTING STARTED	11	Configure J1939 alarms	46
Switching on and off	11	Supported can alarms	47
Button function	12	S09 SPECIFICATIONS	45
Start-up checklist	12	SPECIFICATIONS	45
S04 INSTALLATION	14	S10 CARE	47
BEFORE THE ASSEMBLY	14	CARE	47
Minimum distance with magnetic compass	14		
ARCHITECTURE	15		
INSTALLATION	16		
Installation template	16		
ELECTRICAL CONNECTIONS	16		
Engine and network connections	16		
Easylink satellites connections	17		
RPM sensor connection	19		
Resistive sensor connection	20		
External buzzer connection (B1)	20		
NMEA 2000 network	21		
S05 DATA SCREENS	25		
DATA SCREENS	25		
Screens scrolling	25		
Screen composition	25		
Engine hours counter	25		
Distance traveled	25		
Supported data	26		
Available layout editable	27		
Screens configuration	28		
Screen edit shortcut	29		
DISPLAY SETTINGS	30		
Brightness setup	30		
Day/night mode	30		
Clock settings	31		
Units	31		
Reset	31		
Demo mode	31		

NOTES

INTRODUCTION

Thank you for choosing the SI-5 Nanni interactive control display! This unit is easy to use and will allow you to customize engine informations displayed through the use of alternate screen selections.

The SI-5 will give you the power to track all sensitive informations from your Nanni engine.

For a safe and enjoyable experience with your new SI-5, please read your operator's manual. If you should need additional assistance with the SI-5 operation, please see your Nanni authorized dealer or visit our web site:

www.nannienergy.com

ABOUT THIS MANUAL



This manual contains important information, tips, suggestions and warnings.

Please read it carefully and familiarize yourself with the equipment before starting.

For your own safety and the longest life of the equipment, follow the instructions and warnings contained in this manual and in any literature supplied with the boat. Ignoring them could damage the equipment or cause injury to you or others.

Please make sure this manual is always in the boat. It must always be accessible to anyone using the equipment, i.e., anyone renting, borrowing or buying the boat from you.

Any unauthorized modifications to this equipment, or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/ or property damage, including damage to the equipment. Any such unauthorized modifications: constitute «misuse» and/or «negligence» within the meaning of the product warranty there by excluding warranty coverage for any resulting damage and invalidate certifications or listings.

This unit is not qualified for use in residential or road applications.

BEFORE USING YOUR SI-5

Read this entire manual.

Familiarize yourself with the features and operation of the SI-5 while the boat is stationary.

CONTENTS & UPDATES

All information and specifications contained in this manual are based on technical data applicable at the time of publication. Changes and updates may be made by Nanni without notice.

The illustrations are intended as a general guide, and may vary from the equipment mounted in the engine in some details.

If any details of the equipment are not shown or described in this manual, or if you have any questions about the operation of any equipment, your authorized NANNI dealer will be happy to inform you of the correct maintenance and operating procedures.

WARNING & NOTICES

IMPORTANT DEFINITION



DANGER !

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



WARNING !

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION !

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury, or could cause property damage.



IMPORTANT !

Designates an operating tip or a service suggestion.



NOTE !

Indicates important information in order to facilitate handling or to avoid damage.

S02 SAFETY

ELECTROSTATIC DISCHARGE AWARENESS



NOTE !

In general, electronic equipment should be considered as static-sensitive, some internal components more than others. In view to protect these components from static discharge, some special precautions must be taken to minimize or eliminate electrostatic discharge (risks).

Follow these precautions when working with or near to electronic equipment.

1. As a preventive measure, do not wear synthetic clothing (prefer cotton).
2. Before doing any maintenance or service on the control unit, discharge the static electricity on your body to ground by touching and handling a grounded metal part in the vessel.
3. As a general rule, it is a good practice to keep all plastic materials (cups, ashtrays, bottles...) away before connecting or unconnecting electronic equipment.

ELECTRICAL WIRING



NOTE !

To avoid the possibility of data disturbances, some wiring requirements must be followed.

Follow wiring instructions explained in the Installation chapter.

CONNECTIONS TO ENGINE



NOTE !

Always make sure that the engine and electrical power supply are turned off prior to connect or disconnect the SI-4.3 display.

SERVICEABLE PARTS



NOTE !

There are no serviceable parts inside the unit. Therefore, never remove the protective casing from the unit and never touch the printed circuit board with bare fingers.

During warranty period, removing factory seal would void any warranty claim.

BATTERY CHARGING DEVICE



NOTE !

To prevent damage to a control system that uses an alternator or battery-charging device, make sure the charging device is turned off before disconnecting the battery from the system.

WATERPROOF CONNECTORS KNOBS



NOTE !

Although the unit will operate without them, these blank connectors must not be removed from the back cover, as intended as a moisture protection.

SAFETY INFORMATION

- The product was developed, manufactured and inspected according to the basic safety requirements of EC Guidelines and state-of-the-art technology.
- The instrument is designed for use in grounded vehicles and machines as well as in pleasure boats, including non-classified commercial shipping.
- Use our product only as intended. Use of the product for reasons other than its intended use may lead to personal injury, property damage or environmental damage. Before installation, check the vehicle documentation for vehicle type and any possible special features!
- Use the assembly plan to learn the location of the fuel/hydraulic/compressed air and electrical lines.
- Note possible modifications to the vehicle, which must be considered during installation!
- To prevent personal injury, property damage or environmental damage, basic knowledge of motor vehicle/shipbuilding electronics and mechanics is required.
- Make sure that the engine cannot start unintentionally during installation!
- Modifications or manipulations to Nanni products can affect safety. Consequently, you may not modify or manipulate the product.
- When removing/installing seats, covers, etc., ensure that lines are not damaged and plug-in connections are not loosened.
- Note all data from other installed instruments with volatile electronic memories.

SAFETY DURING INSTALLATION

- During installation, ensure that the product's components do not affect or limit vehicle functions. Avoid damaging these components.
- Only install undamaged parts in a vehicle.
- During installation, ensure that the product does not impair the field of vision and that it cannot impact the driver's or passenger's head!
- A specialized technician should install the product. If you install the product yourself, wear appropriate work clothing. Do not wear loose clothing, as it may get caught in moving parts. Protect long hair with a hair net.
- When working on the on-board electronics, do not wear metallic or conductive jewelry such as necklaces, bracelets, rings, etc.
- If work on a running engine is required, exercise extreme caution. Wear only appropriate work clothing as you are at risk of personal injury, resulting from being crushed or burned.

- Before beginning, disconnect the negative terminal on the battery, otherwise you risk a short circuit. If the vehicle is supplied by auxiliary batteries, you must also disconnect the negative terminals on these batteries. Short circuits can cause fires, battery explosions and damages to other electronic systems. Please note that when you disconnect the battery, all volatile electronic memories lose their input values and must be reprogrammed.
- When working on boat engine, let the engine compartment fan run before beginning work.
- Pay attention to how lines and cable harnesses are laid so that you do not drill or saw through them.
- Do not install the product in the mechanical and electrical airbag area.
- Do not drill holes or ports in load-bearing or stabilizing stays or tie bars.
- When working underneath the vehicle, secure it according to the specifications from the vehicle manufacturer.
- Note the necessary clearance behind the drill hole or port at the installation location. Required mounting depth: 65 mm.
- Drill small ports; enlarge and complete them, if necessary, using taper milling tools, saber saws, keyhole saws or files. Deburr edges. Follow the safety instructions of the tool manufacturer.
- Use only insulated tools, if work is necessary on live parts.
- Use only the multimeter or diode test lamps provided, to measure voltages and currents in the vehicle/machine or boat. Use of conventional test lamps can cause damage to control units or other electronic systems.
- The electrical indicator outputs and cables connected to them must be protected from direct contact and damage. The cables in use must have enough insulation and electric strength and the contact points must be safe from touch.
- Use appropriate measures to also protect the electrically conductive parts on the connected consumer from direct contact. Laying metallic, uninsulated cables and contacts is prohibited.

SAFETY AFTER INSTALLATION

- Connect the ground cable tightly to the negative terminal of the battery.
- Reenter/reprogram the volatile electronic memory values.
- Check all functions.
- Use only clean water to clean the components. Note the Ingress Protection (IP) ratings (IEC 60529).

ELECTRICAL CONNECTION

- Note cable cross-sectional area.
- Reducing the cable cross-sectional area leads to higher current density, which can cause the cable cross-sectional area in question to heat up!
- When installing electrical cables, use the provided cable ducts and harnesses; however, do not run cables parallel to ignition cables or to cables that lead to large electricity consumers.
- Fasten cables with cable ties or adhesive tape. Do not run cables over moving parts. Do not attach cables to the steering column.
- Ensure that cables are not subject to tensile, compressive or shearing forces.
- If cables are run through drill holes, protect them using rubber sleeves or the like.
- Use only one cable stripper to strip the cable. Adjust the stripper so that stranded wires are not damaged or separated.
- Use only a soft soldering process or commercially available crimp connector to solder new cable connections!
- Make crimp connections with cable crimping pliers only. Follow the safety instructions of the tool manufacturer.
- Insulate exposed stranded wires to prevent short circuits.
- Caution: Risk of short circuit if junctions are faulty or cables are damaged.
- Short circuits in the vehicle network can cause fires, battery explosions and damages to other electronic systems. Consequently, all power supply cable connections must be provided with weldable connectors and be sufficiently insulated.
- Ensure ground connections are sound.
- Faulty connections can cause short circuits. Only connect cables according to the electrical wiring diagram.
- If operating the instrument on power supply units, note that the power supply unit must be stabilized and it must comply with the following standard: DIN EN 61000, Parts 6-1 to 6-4.

S03 PRESENTATION

PRESENTATION

SI-5 PRESENTATION

SI-5 Multifunction Display redefines clarity and control in marine environments. Featuring a 4.3" optically bonded IPS TFT screen with anti-glare mineral glass, it delivers brilliant visibility even in harsh conditions.

Designed for seamless integration, it supports NMEA 2000® and SAE J1939 protocols, analog sensors, and Ethernet connectivity.

With lightning-fast startup, customizable multilingual GUI, and robust IPX7-rated housing, the Si-5 is built to perform.

Whether monitoring engines, tanks, batteries, or navigation data, this display offers intuitive interfaces, graphical insights, and real-time alarms.

Its compact 85mm round form factor and flame-retardant housing make installation simple and safe.

GETTING STARTED

SWITCHING ON AND OFF

The display's on/off mode depends on the status of the Ignition signal.


At power up, logo and firmware version will appear when turned on, followed by the last data page viewed before the display was last turned off.

Turn the ignition key to ON position, the screen power on. At power up, NANNI logo and software version followed by a security message appear when turned on followed by the last data page viewed before turned off.

Turn the ignition key to OFF position, the screen power OFF.





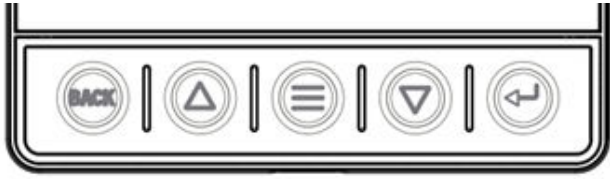


BUTTON FUNCTION



Following are the steps for initial configuration:

1. Connect eventual sensors to the display's analog inputs.
1. Set up the boat setup with the "System Setup" menu:
 - Engine setup (engine amount / min and max / idle speed, etc....)
 - Tanks setup (amount / types / capacities)
 - Battery setup
1. Set up the display settings, like units or brightness levels.
2. Add/remove screens selecting the best layout and data to be displayed.
3. Calibrate the analog sensors, if any has been connected.
4. Set up local alarms if required.


Button	Name	Function
	BACK	Short press: <ul style="list-style-type: none">• In normal operation: Day/Night Mode switch• In menus: Return to the previous menu 3 sec press: <ul style="list-style-type: none">• From any point to return to the data pages
 	UP DOWN	Short press: <ul style="list-style-type: none">• Scroll screens/options/menu items
	MENU	Short press: <ul style="list-style-type: none">• Open the menu• Return to the previous menu 3 sec press: <ul style="list-style-type: none">• In normal operation: Edit current screen• In menus: Return to the data pages
	ENTER	Short press: <ul style="list-style-type: none">• Open a sub-menu• Confirm the selection

START-UP CHECKLIST


S04 INSTALLATION

BEFORE THE ASSEMBLY


Before starting work, switch off the ignition and remove the ignition key. If necessary, remove the main power switch.



Disconnect the negative terminal of the battery. Do not allow the battery to be reconnected by mistake.

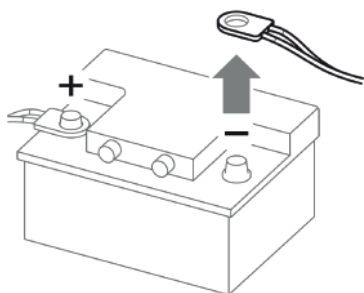

When mounting the device in the vicinity of a magnetic compass, maintain a protective distance from the compass.

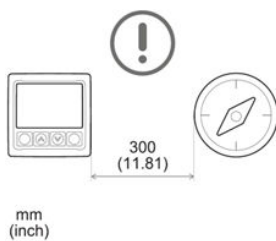

Purchase an NMEA 2000 drop cable with five-pin M12 connector (max drop cable length 6 m).




CAUTION !

Before starting work, disconnect the negative terminal of the battery to avoid the risk of a short circuit. If the vehicle is equipped with additional batteries, the negative terminal of all batteries must also be disconnected if necessary. Short circuits can burn cables, explode batteries and cause damage to other electronic systems. Remember that by disconnecting the battery, all data entered in the temporary electronic memory will be lost and will have to be reprogrammed.


MINIMUM DISTANCE WITH MAGNETIC COMPASS

Respect a minimum distance of 300 mm (11.81 in) with the magnetic compass to avoid risk of interference.

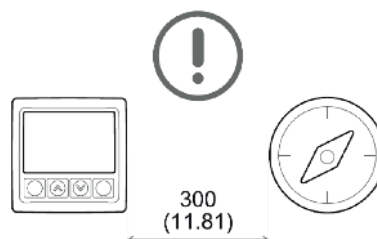

ARCHITECTURE

Following is an example of an application with two displays; one used as a gateway and the other as a NMEA 2000 monitor.

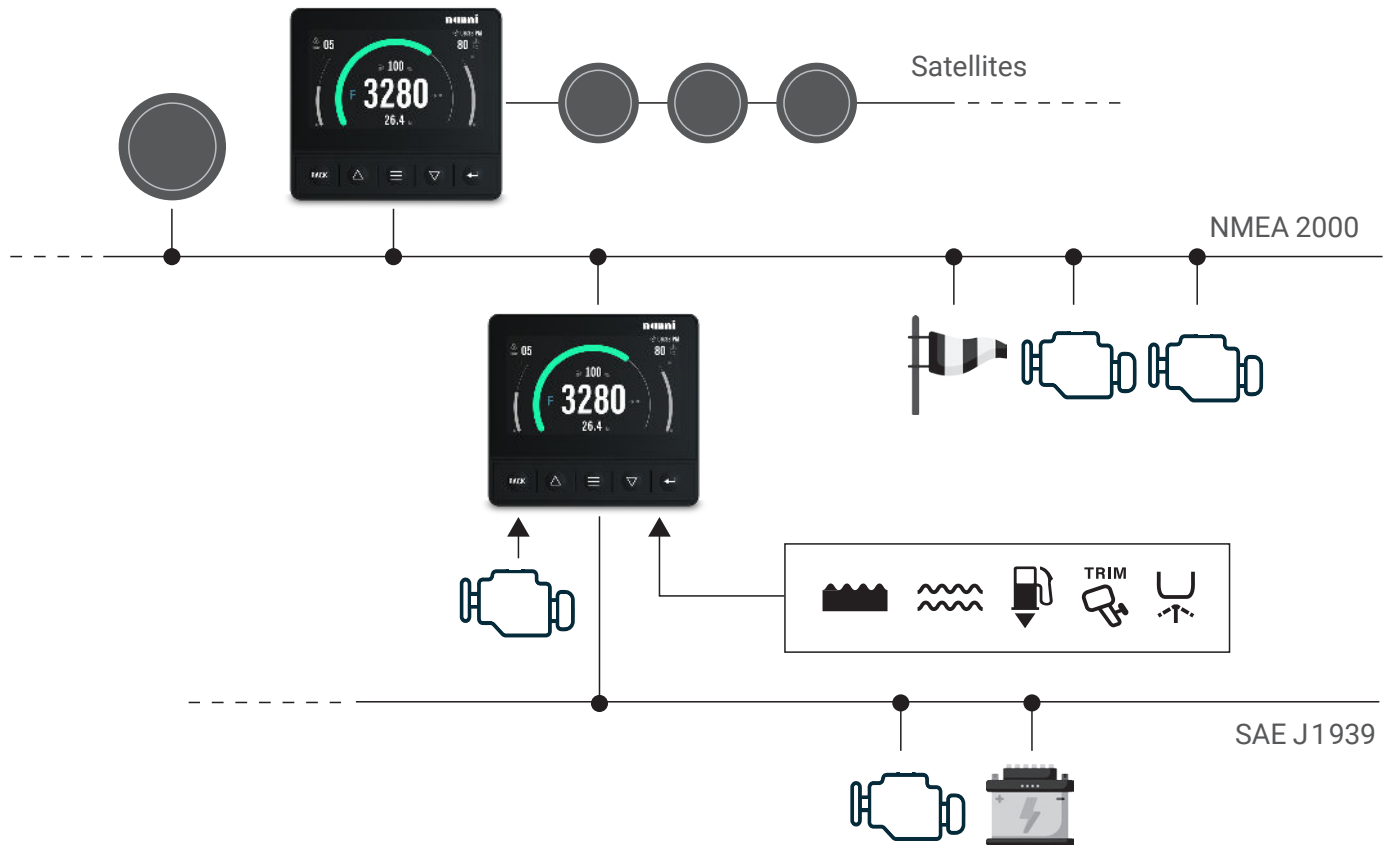

S04 INSTALLATION

INSTALLATION

INSTALLATION TEMPLATE

Use the template given in the box:

1. Drill a hole in the panel using the drilling template (see next page of this document) and considering the device outer dimensions.

2. Insert the device from the front and tighten the spinlock nut.



NOTE: depending on the panel's thickness the spinlock must be installed in different direction.

3. Fasten the required connectors.

NOTE: screw in the M12 connectors with care. If they screw in with difficulty, remove them and screw them back in.

4. Remove the protection film from the display and make sure it is clean and dry.

5. Install the sun cover.

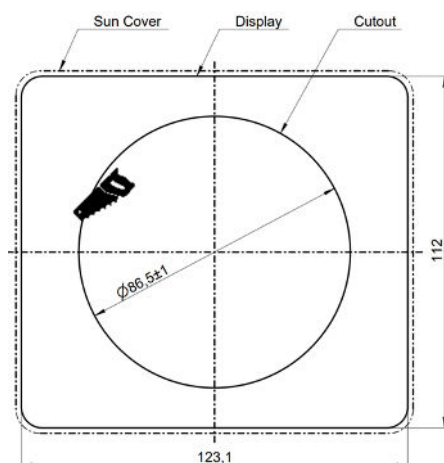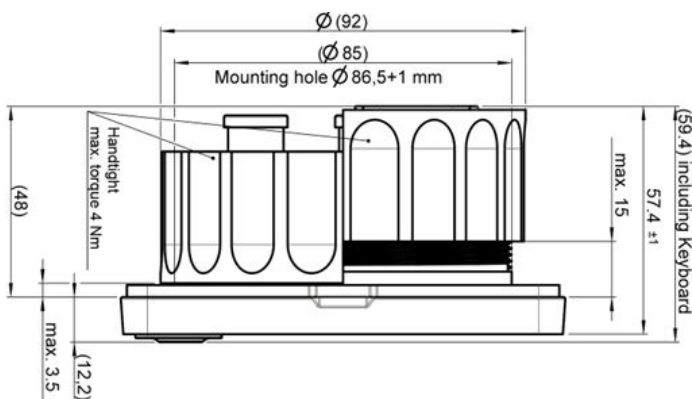

CAUTION !

Do not drill holes or installation openings in supporting or stabilizing beams!


The mounting location must have sufficient clearance behind the mounting holes or openings.

Drill small holes with the drill, if necessary, enlarge them using a conical cutter, scroll saw, tail saw or file and finish them. Deburr the edges. It is essential to observe the safety instructions of the tool manufacturer.

ELECTRICAL CONNECTIONS

ENGINE AND NETWORK CONNECTIONS

ENGINE CONNECTOR/PLUG (C)

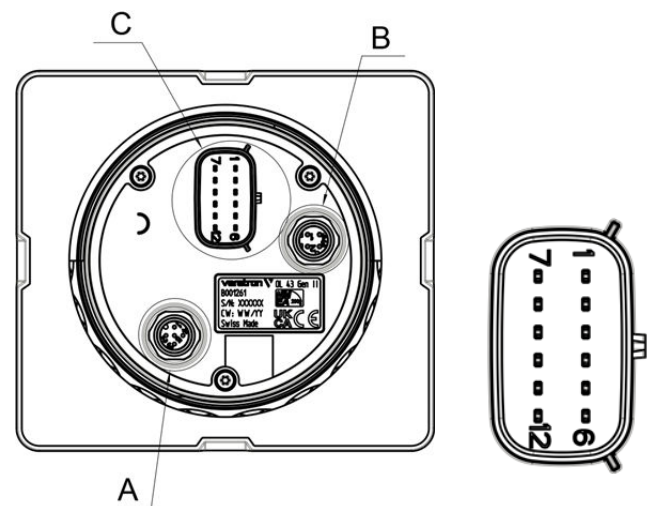


Pin No.	Wire color	Description
1	Red	Ignition Plus (+12/24V)
2	Black	GND
3	White	Buzzer Out
4	Green	Frequency input (RPM)
5	Blue	CAN_L (SAE J1939)
6	Blue / White	CAN_H (SAE J1939)
7	Yellow	0-5 V input
8	Grey	Resistive Input 1
9	Brown	Resistive Input 2
10	Orange	Illumination
11	Light Blue	EasyLink Power
12	Violet	EasyLink Data

S04 INSTALLATION

NMEA 2000 plug (C)

This plug is dedicated to NMEA 2000 connectivity, all devices connected on the network can be view on the screen panel.

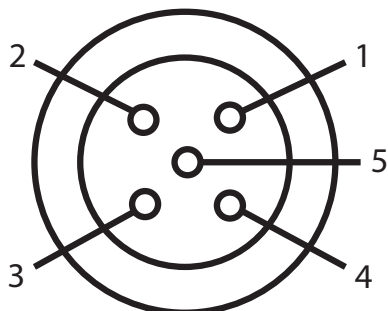

Pin No.	Description
1	Shield
2	NET-S(V+)
3	NET-C(V-)
4	NET-H (CAN H)
5	NET-L (CAN L)

EASYLINK SATELLITES CONNECTIONS

The Si-5 display can be used as a master gauge to drive up to 16 VMH14 satellite gauges.

The satellites are all connected in a single row (daisy chain).


The EasyLink interface allows a total length of maximum 20 meters.

AMP SuperSeal 1.5 3 poles plug cable view:



Pin No.	Description
1	12V Power (from display)
2	GND
3	EasyLink Data

ETHERNET CONNECTOR (B)

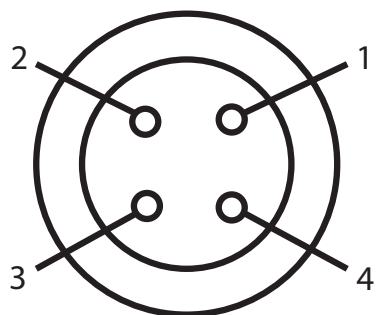


Pin No.	Description
1	Tx +
2	Rx +
3	Tx -
4	Rx -

S04 INSTALLATION

ELECTRICAL DIAGRAM

This diagram is a help to connect the harness with wires colors to your harness engine installation:

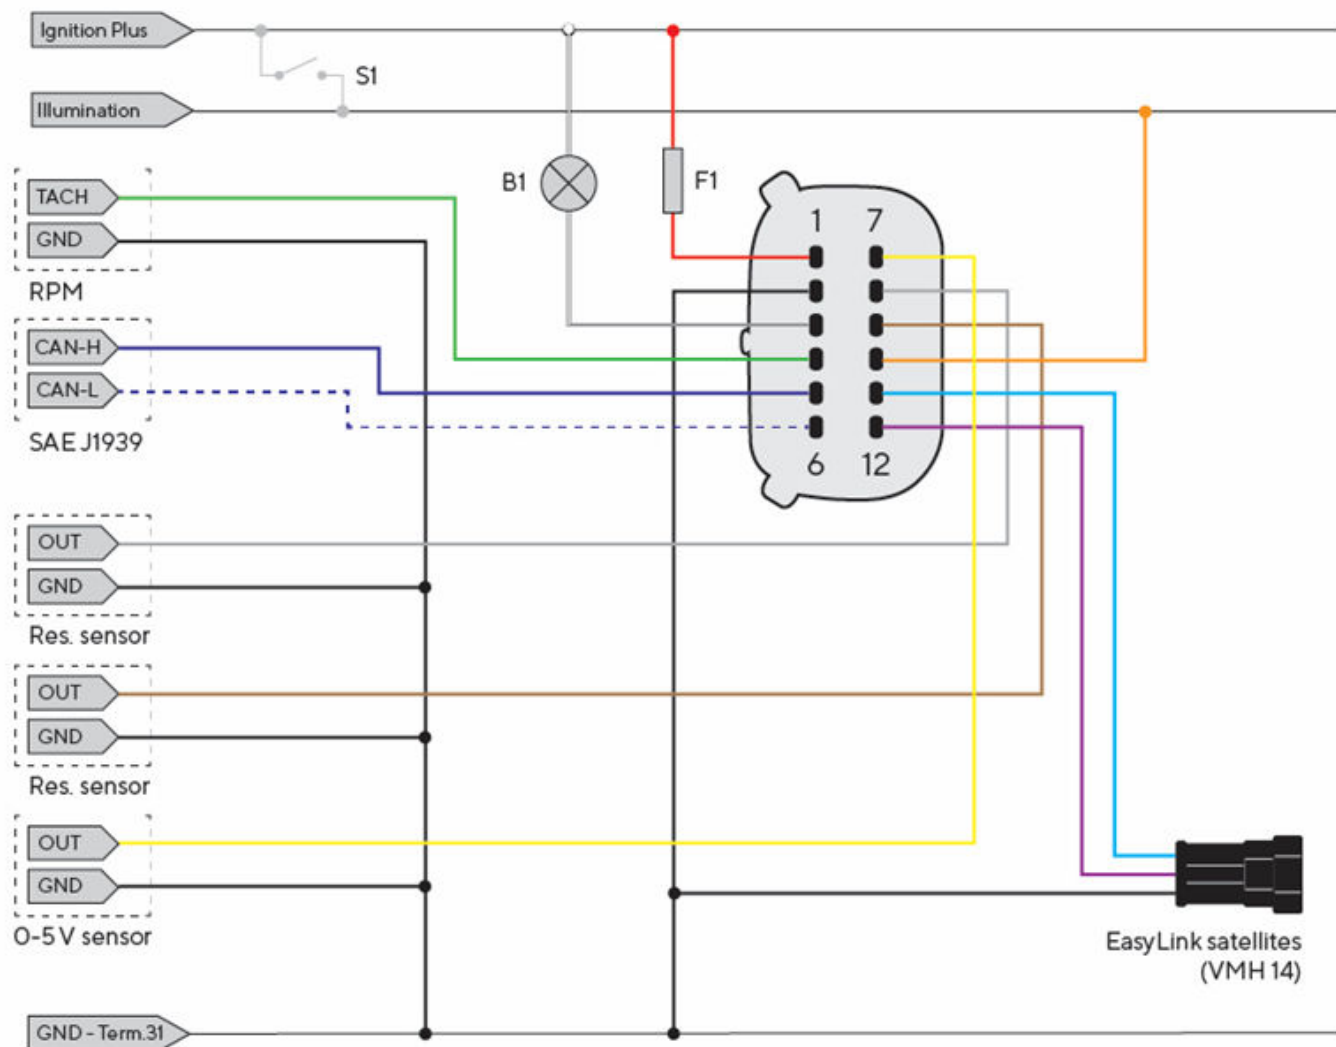

S1	Day/Night mode switch (not included)
F1	3A fuse (not included)
B1	External acoustic alarm / warning lamp (not included)
RES	Resistive inputs
RPM	Frequency input for tachometer
J1939	SAE J1939 CAN port


S04 INSTALLATION

RPM SENSOR CONNECTION

The engine RPM signal can be obtained from different sources, respectively the alternator "W" terminal, the ignition coil terminal "1", or from dedicated sensors such as a generator or an inductive sensor.

It is advisable to use sensors with isolated ground, and it is necessary to ensure that the sensor ground is connected to the display ground to avoid incorrect readings.

Alternator terminal "W".

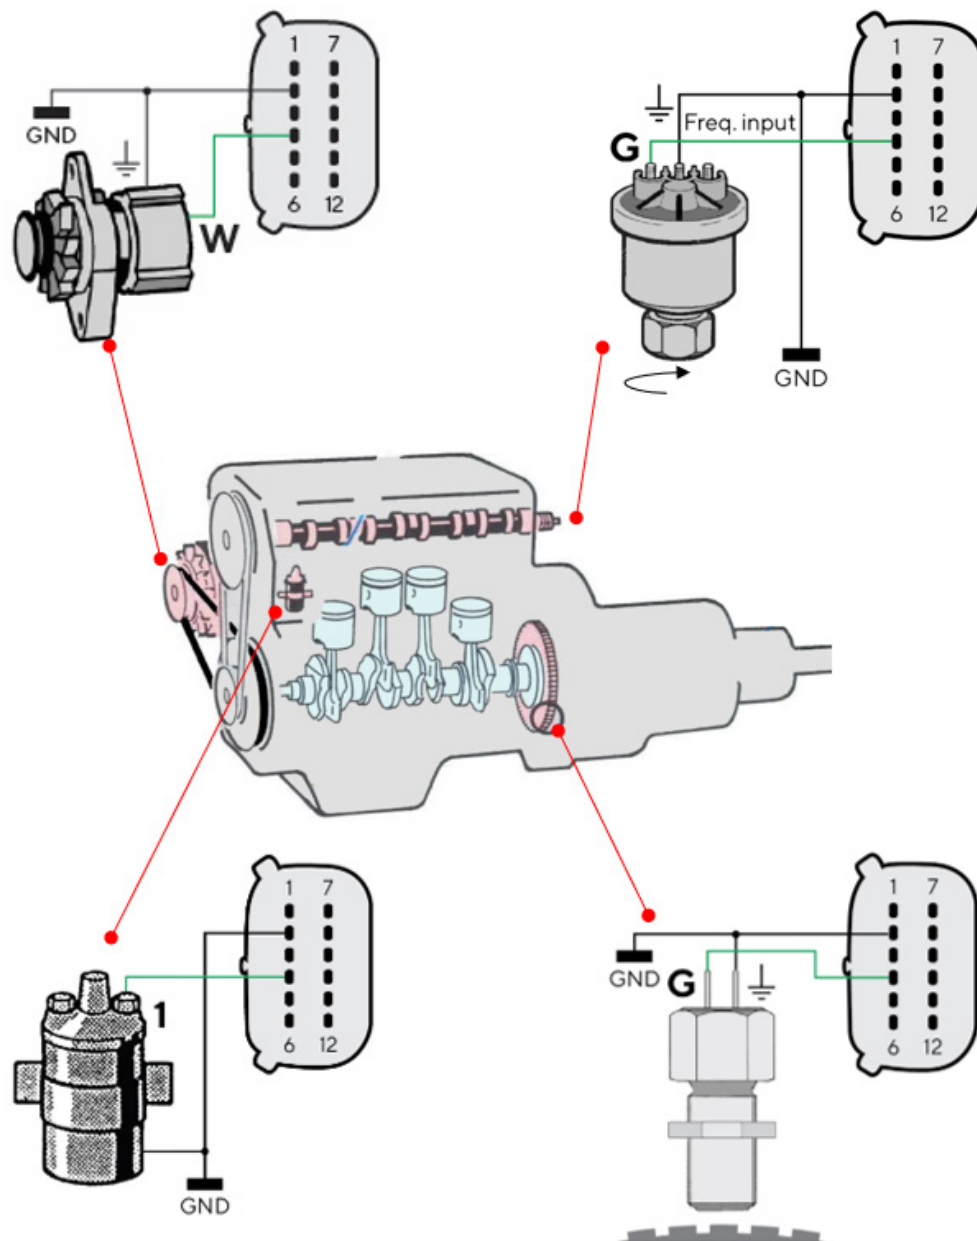

IMPORTANT !

It is advisable to use sensors with isolated ground, and it is necessary to ensure that the sensor ground is connected to the display ground to avoid incorrect readings

S04 INSTALLATION

RESISTIVE SENSOR CONNECTION


Any sensor connected to a resistive input of the display must be connected as shown in the figure.



IMPORTANT !


It is advisable to use sensors with isolated ground, and it is necessary to ensure that the sensor ground is connected to the display ground to avoid incorrect readings.

Possible connection with resistive sensor:

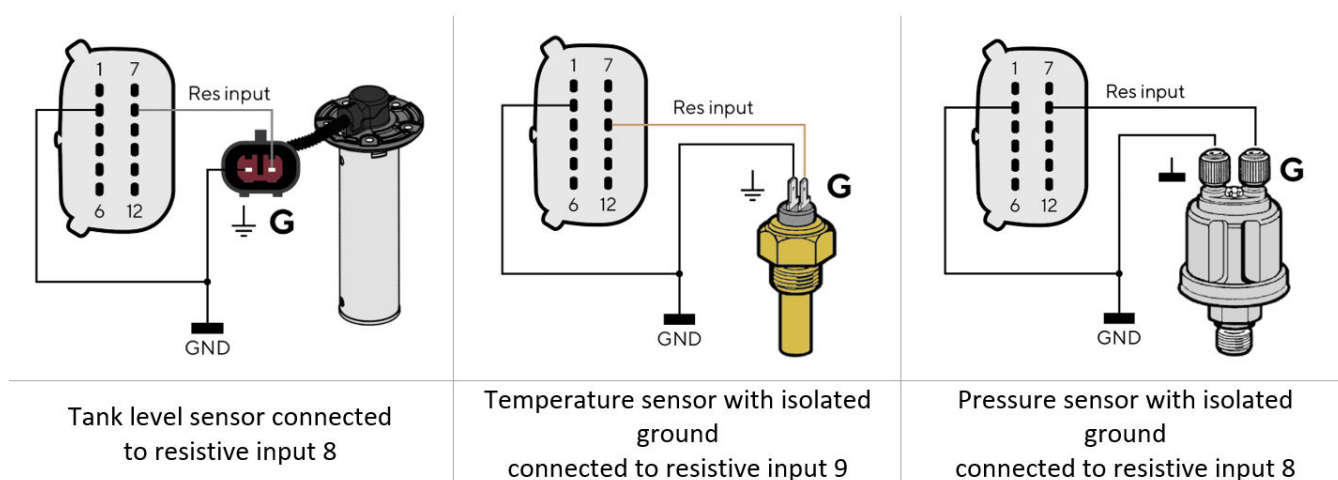

EXTERNAL BUZZER CONNECTION (B1)

The display supports the connection of two external alarms (B1) via the dedicated alarm outputs. This buzzer/lamp can be powered at different voltages (consult the buzzer manufacturer's manual), as the alarm output is connected to ground inside the display. It is important to note that the maximum current supported is 500mA.

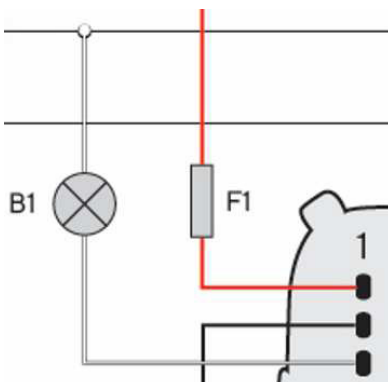

S04 INSTALLATION

NMEA 2000 NETWORK

Once the installation is complete, you can interface the device to the NMEA 2000 network through the dedicated socket on the wiring harness.

Be sure to tighten the M12 connector by screwing it onto its counterpart in order to preserve its water tightness. A drop cable is not required unless the total length of the supplied wiring is not sufficient to reach the NMEA 2000® backbone. In this case, the total length can be extended using one of the accessory drop cables.



NOTE !

**NMEA 2000 does not allow drop cables longer than 6 meters.
Refer to the NMEA 2000 standard for proper network design**



S05 DATA SCREENS

DATA SCREENS


Data screens show the data received from the various sources. The display can store up to 10 data screens which the user can configure and scroll.

SCREENS SCROLLING

To scroll pages, press the UP or DOWN buttons.
To add/delete/edit screens, see "Screen configuration".

SCREEN COMPOSITION

Every screen contains some common elements, which are always displayed independently of the screen layout which is chosen.

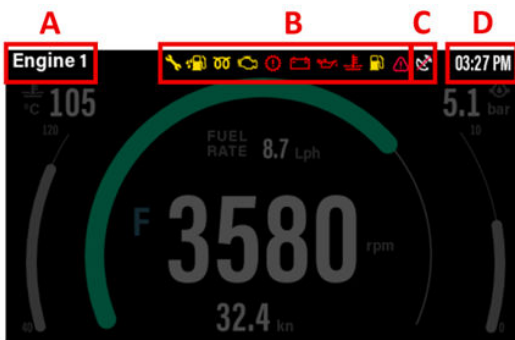

Zone	Description
A	Screen name
B	Alarm lamps
C	GPS signal statut
D	Clock

The screen content depends on the screen configuration and selection.

ENGINE HOURS COUNTER

The Si-5 display maintains an internal hour counter for each engine (1 to 4).

The hour counters are active when the related engine speed is more than 300 RPM.

For each engine, the user can choose whether to display the internal counter or to display the data received from another source by accessing the Data Source feature in the Network Menu.

In case an engine is connected via frequency input (RPM), the related internal hour counter is also transmitted on the NMEA 2000 network if this option is active (Network -> NMEA 2000 -> Gateway -> ON).

DISTANCE TRAVELED

The indicator internally calculates the distance travelled (Trip Distance) based on the speed value set in the menu Setup -> Speed Reference.

S05 DATA SCREENS

SUPPORTED DATA

Group	Data	Input			Output	
		NMEA 2000	SAE J1939	Analog	NMEA 2000	EASY-LINK
ENGINE	RPM	X	X	X	X	
	GEAR POSITION	X	X	-	-	
	TRIM	X	-	X	X	
	BOOST PRESSURE	X	X	X	X	
	COOLANT PRESS	X	X	-	-	
	COOLANT TEMP	X	X	X	X	
	FUEL RATE	X	X	-	X	
	FUEL PRESSURE	X	X	-		
	AIR CHARGE TEMP	X	X	-		
	ENGINE LOAD	X	X	-	X	
	EXHAUST TEMP	X	X	-	X	
	ENGINE OIL TEMP	X	X	X	X	
	ENGINE OIL PRESSURE	X	X	X	X	
	TRANSMISSION OIL TEMP	X	X	X	X	
	TRANSMISSION OIL PRESS	X	X	X	X	
	ENGINE HOURS	X	X	-	X	
	ALTERNATOR POTENTIAL	X	X	-	X	
TANKS	FUEL LEVEL	X	X	X	X	
	FRESH WATER LEVEL	X	-	X	X	
	WASTE WATER LEVEL	X	-	X	X	
	BLACK WATER LEVEL	X	-	X	X	
BATTERY	BATTERY VOLTAGE	X	X	-	X	
	BATTERY CURRENT	X	X	-	X	
	STATE OF CHARGE	X	-	-	-	
	STATE OF HEALTH	X	-	-	-	
	BATTERY TEMPERATURE	X	-	-	-	
	AUTONOMY	X	-	-	-	
Boat	RUDDER ANGLE	X	-	X	X	
	DEPTH	X	-	-	-	
	COURSE OVER GROUND	X	-	-	-	
	HEADING (TRUE/MAG)	X	-	-	-	
	BOAT SPEED	X	-	-	-	
	SPEED OVER GROUND	X	-	-	-	
	VELOCITY MADE GOOD	X	-	-	-	
	PITCH	X	-	-	-	
	ROLL	X	-	-	-	
	POSITION	X	-	-	-	
	BEARING TO WAYPOINT	X	-	-	-	
	DISTANCE TO WAYPOINT	X	-	-	-	
	TRIP TIME	X	-	-	-	
	TRIP DISTANCE	X	-	-	-	
	TRIM TABS	X	-	-	-	

S05 DATA SCREENS

AVAILABLE LAYOUT EDITABLE

Each of the 10 screens can be customized with one of the following available layouts:

Single engine layout:




Dedicated screen for single engine monitor with two customizable bar graphs, gear indicator, and additional two numeric fields to have all your engine information always under control.

Dual engine layout:




Dedicated screen for dual engine setups, to have all the information on one screen. All the bar graphs and the numeric fields can be customized to display the most relevant data.

Full screen:

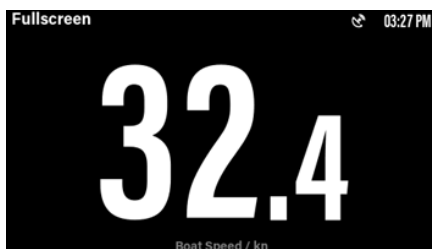


Single data display with big numeric digits for the best clarity of your critical data.

Quad screen:

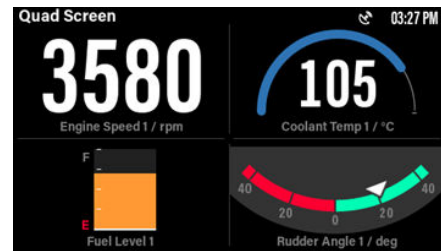


Four customizable fields, each one capable of both numeric information and special elements like gauges, bar graphs, and more.

Tanks:

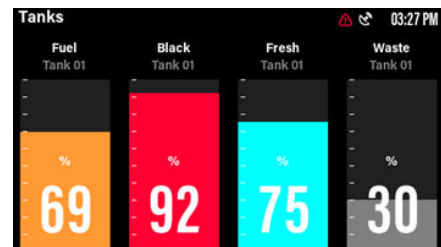

Display of up to four tanks, with colored bars and numeric indication of the filling quantities. Fuel / Fresh / Waste / Black Water levels are supported.


Intelligent battery monitor:

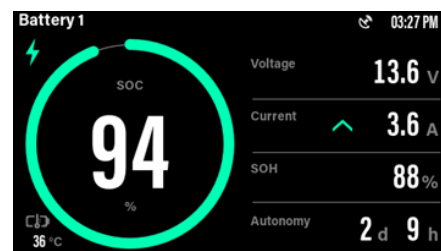

Dedicated screen for battery monitoring including extensive battery information coming from the Intelligent Battery Sensor (IBS).

S05 DATA SCREENS

SCREENS CONFIGURATION

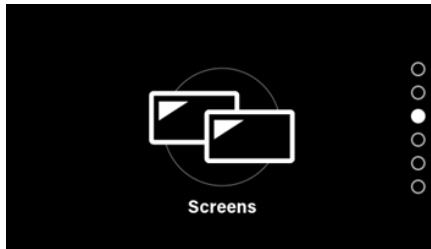


Access the display menu by pressing the MENU button and select the SCREENS submenu to enter the screens' configuration.

Select "New" to add an additional screen. -> step 3


"Edit" to modify/delete an existing screen. -> step 2

"Reset" to set the factory default screens

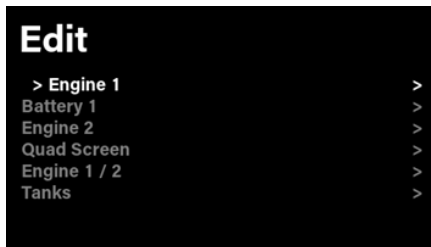


In case "Edit" is selected, the display will list all the screens that are currently defined.

Select the screen to be edited/deleted.

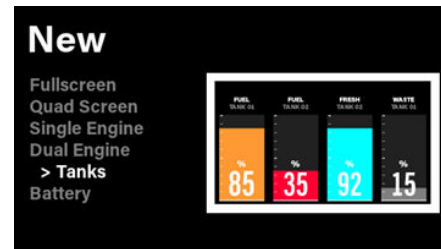

Select the layout for the new screen or for the screen to be edited.


See the "Screens" chapter for more details about each layout.

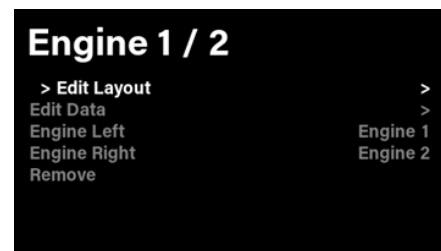

Depending on the layout defined, it is possible to customize some data fields or bar graphs by selecting "Edit Data".

For the Engine and Battery screens it is possible to define the instance to be displayed.

The "Remove" option deletes the current screen.

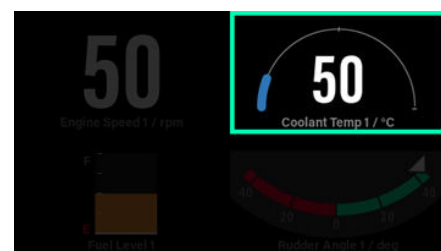

The currently selected item is highlighted with a green frame.

Scroll through the customizable fields by pressing the UP and DOWN buttons.

Press ENTER to select the item to be customized.

S05 DATA SCREENS

Edit Data

> Engine
Tanks
Battery
Boat

Once a field is selected it is possible to select which data to display in that field.

The data available for that selected field is hierarchically arranged into groups.

Press the UP/DOWN/ENTER buttons to navigate the menu to find the data to be displayed.

See "Supported Data" for the complete list of available data.

Tank 1

> Numeric
Gauge
Bar

In the Quad layout, a special display format can be chosen for some data, like a bar graph or a gauge.

Once the data is found, press ENTER to confirm the selection.


To customize another field just select it as described in step 5.

To customize another screen press BACK many times until the screen is back to the selection described in step 2.

To quit the settings and return to normal operation, press the BACK button for 3 seconds.

SCREEN EDIT SHORTCUT


To quickly modify an existing screen during normal operation, keep pressing the MENU button for 3 seconds while displaying the screen to be edited.

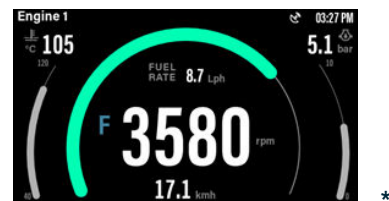

Normal operation



Press MENU for 3 seconds

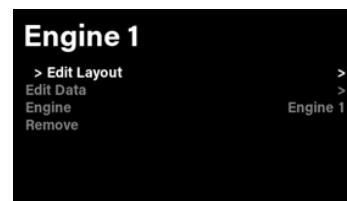

Edit screen (step 4 above)

The display will show the editing properties for the selected screen, as described in step 4 of the screens customization process.

S05 DATA SCREENS

DISPLAY SETTINGS

BRIGHTNESS SETUP

Setting	Description	Possible values / commands
Intensity	Brightness of the display. NOTE: this setup affects all the EasyLink gauges connected to the display.	0 (min) to 10 (max) Default = 10
Sync	The display shares the brightness intensity via NMEA to other displays if the "Sync" option is set to "Yes"	Yes / No Default = Yes
Zone	Used to assign the display to a zone. When the Sync function is activated, the display shares the same brightness level only with other devices in the same zone.	ALL / 1 to 4 Default = ALL

The display brightness selected is stored for the current Day/Night mode, see next chapter.
(If intensity is changed while in Day mode, then the setting is stored for Day mode. Same for the Night mode).

DAY/NIGHT MODE


The Si-5 display stores two backlight configurations for the display: one for Day mode and one for Night mode.

Setting	Description
Day	Forces the display in Day mode.
Night	Forces the display in Night mode (red color palette).
External	The Day or Night mode depends on the status of the illumination pin 10 (orange wire), which can be connected to the boat cabin lights' switch. To Battery Plus = Night mode Open = Day mode


Factory default = External

DAY / NIGHT SWITCH SHORTCUT

To quickly switch between Day and Night mode during normal operation, press the BACK button while displaying any screen.

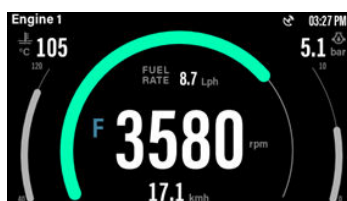

-> PRESS BACK ->

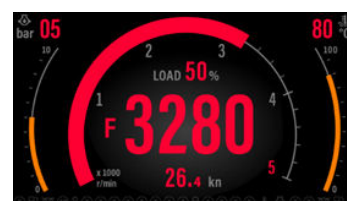

S05 DATA SCREENS

CLOCK SETTINGS

Setting	Description
Format	12h / 24h (default = 24h)
Clock Offset	-12h to +12h (default = 0h)

UNITS

Setting	Metric	Imperial	Nautical	Custom
Depth	m	ft	ft	m, ft
Temperature	°C	°F	°F	°C, °F
Distance	km	mi	nm	km, mi, nm
Speed	kn	mph	kn	km/h, mph, kn
Volume	L	Gal	US Gal	%, L, US Gal, UK Gal
Atm. Press	hPa	hPa	hPa	mbar, hPa, mmHg, inHg
Fluid Press	bar	PSI	PSI	bar, kPa, psi
Consumption	Lph	Gph	US Gph	Lph, UK Gph, US Gph
Economy	Km/L	Mpg	Nm/L	Km/L, mpg, Nm/L
Wind speed	kn	kn	kn	km/h, kn, m/s, mph

Default = Metric

RESET

Setting	Description
Reset Trip	Resets both the Trip Time and Trip Distance counters
Reset Screens	Resets the screens configuration to the factory defaults in terms of number of screens, layout, and data displayed.
Reset Sensors	Resets the settings and calibrations of the analog sensors.
Reset Factory	Display factory reset.

After the selection, a confirmation popup appears to avoid accidental resets.
Press YES to confirm the operation and perform the reset.

DEMO MODE

Setting	Description
ON	Activates the demo mode.
OFF	Deactivates the demo mode.

Factory default = OFF

The demo mode simulates data on the display and on the EasyLink satellite devices.
For safety reasons, the simulated data are NOT transmitted on the NMEA 2000 network.

S06 SYSTEM SETTINGS

SYSTEM SETUP

ENGINE/BATTERY SETUP

Setting	Description	Possible values / commands
Engine Setup	Number of engines of the boat	1 to 4 (default = 1)
Battery Setup	Number of batteries on the boat	1 to 4 (default = 1)

This information is used to tailor the available options down to the actual boat configuration (e.g., when selecting the instance of an engine data, or for the engine screen layout).

TANKS SETUP

Setting	Description	Possible values / commands
Fuel	Number of fuel tanks. For each tank it is possible to define the capacity.	1 to 4 (default = 1) Capacity 0 to 5000 L Default = N/D
Fresh Water	Number of fresh water tanks. For each tank it is possible to define the capacity.	1 to 4 (default = 1) Capacity 0 to 5000 L Default = N/D
Waste Water	Number of waste water tanks. For each tank it is possible to define the capacity.	0 to 4 (default = 0) Capacity 0 to 5000 L Default = N/D
Black Water	Number of black water tanks. For each tank it is possible to define the capacity.	0 to 4 (default = 0) Capacity 0 to 5000 L Default = N/D

This information is used during other configurations to tailor the available options down to the actual boat configuration (e.g., when configuring analog tank sensors).

If the capacity for a specific tank is defined, or received from NMEA 2000, the related tank level in the display screens is available in remaining liters (or gallons) instead of fill percentage (if "%" is selected in the units setup).

S06 SYSTEM SETTINGS

SET SCALES

This setup is needed to define the min and max scale for some data when displayed in a gauge or bar graph format.

Setting	Possible values
Engine Speed	3000 – 10000 RPM (default = 5000 RPM)
Coolant Temp	0 – 200 °C (default = 40 - 120 °C)
Engine Oil Press	0 – 30 bar (default = 0 - 10 bar)
Engine Oil Temp	0 – 200 °C (default = 50 - 150 °C)
Transm Oil Temp	0 – 200 °C (default = 50 - 150 °C)
Transm Oil Press	0 – 30 bar (default = 0 - 25 bar)
Boost Press	0 – 30 bar (default = 0 - 2 bar)
Battery Voltage	0 – 40 V (default = 8 - 16 V)
Battery Current	-100 – 100 A (default = -100 - +100 A)
Speed	0 – 100 kn (default = 0 – 70 kn)

This setup is displayed in accordance with the unit settings defined by the user.

OFFSETS

Setting	Description	Possible values
Compass Offset	Offset for the heading data.	-180 to + 180° Default = 0
Depth Offset	Positive values represent distance from transducer to the waterline, and negative values represent distance from transducer to the keel.	-50 to + 50 m Default = 0
Rudder Offset	Offset for the rudder position.	-90 to +90° Default = 0
Speed Correction Factor	Multiplication factor for the raw speed value received from the Log sensor.	x0.1 to x10 Default = 0

Whenever an offset is defined for a data, the Si-5 display also acts as source for that adjusted data by transmitting it over NMEA 2000.

S06 SYSTEM SETTINGS

ADJUSTING THE SPEED CORRECTION FACTOR

The speed offset factor lets you align the speed through water (STW) to the actual speed. If the measured speed differs from the real boat speed of more than 0.5 kn, this factor can be adjusted. Increasing the offset factor reduces the displayed speed through water (STW).

SERVICE RESET

With the "Service Reset" menu it is possible to reset the service notification for a specific engine to the "interval" defined in the Alarms menu (see dedicated chapter).

Setting	Description
ALL	Resets the service notification for all the engines.
Engine 1 to 4	Resets the service notification for a specific engine.

After the selection, a confirmation popup appears to avoid accidental resets. Press YES to confirm the operation and perform the reset.

SPEED REFERENCE


Through this menu it is possible to select which data the display must use for internal calculations like the Trip Distance.

Setting	Description
SOG	Sets Speed Over Ground (SOG) as reference.
Boat Speed	Sets Boat Speed (Water Speed) as reference.

Factory default = SOG

NETWORK SETTINGS

DATA SOURCE SELECTION

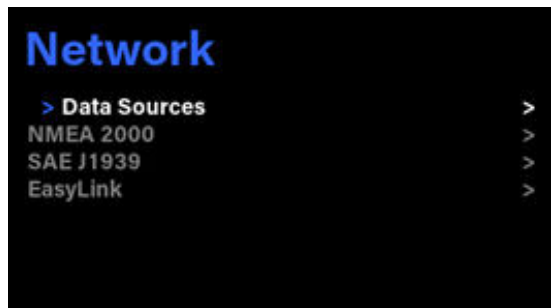

For each data it is possible to select the source where to display the data from.

See the "Input" column of the "Supported Data" table for an overview of all the supported sources for each data.

The source selected defines the source used for every calculation / output (e.g. NMEA 2000 gateway, EasyLink output, Service Counter, etc....)

Setting	Description	Possible Values
Auto	Automatically acquires the data from the interface where it is available.	-
NMEA 2000	Displays the data from a specific NMEA 2000 device in the network.	List of NMEA 2000 devices
SAE J1939	Displays the data from J1939 port.	-
Analog / Internal	Uses the local analog sensor reading or the internally calculated value (if applicable)	-

Factory default = Auto

This feature is mostly needed in complex systems with redundancy of data (same data from multiple sources). In all the other cases, the "Auto" setting is the best option.


If multiple sources are sending the same data, the "Auto" option uses the following priority to display the data: ANALOG > SAE J1939 > NMEA 2000 > INTERNAL

SAE J1939 GATEWAY

The Si-5 display is equipped with one SAE J1939 port to connect a CAN engine to the display and read the digital data and alarms coming from it.

It is important to properly set up the J1939 gateway so that all the engine data received are displayed with the correct engine number.

This also ensures that the data is correctly forwarded to the NMEA 2000 network with the correct instance.

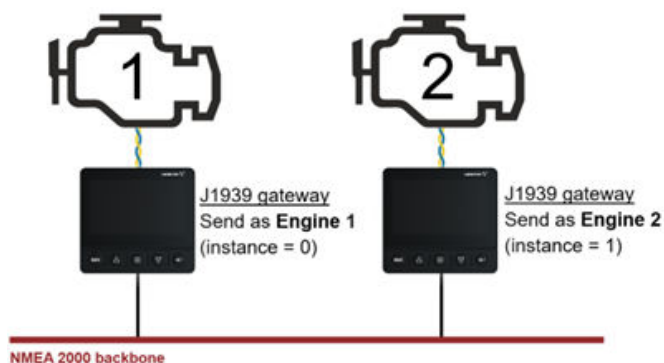


S07 SENSOR CONFIGURATION

SENSOR CONFIGURATION

CONFIGURING A SENSOR

Once accessed to the Sensors menu, it is first needed to select the analogue port where the sensor output is physically wired.

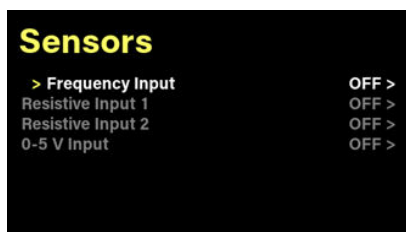


The available options are:

- Frequency input (pin 4 – Green wire)
- Resistive input 1 (pin 8 – Grey wire)
- Resistive input 2 (pin 9 – Brown wire)
- 0-5 V input (pin 7 – Yellow wire)

FREQUENCY INPUT SETUP

This menu is used to configure the display frequency input for RPM readings.

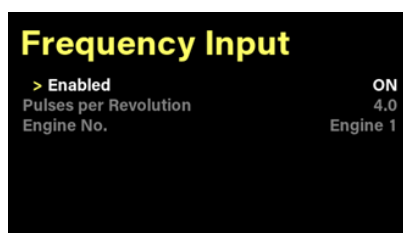

Setting	Description	Possible Values
Enabled	Enable or disable the input.	ON / OFF
Pulses per Revolution	The number of electrical pulses that the sensor generates for each full rotation of the engine's crankshaft.	1.0 to 600.0
Engine No.	The number of the engine connected to the input.	Engine 1 to 4 (the selection includes only the Engine number defined in the Setup menu)


Factory default = OFF

The pulses per revolution value depends on the source used for the tachometer signal (alternator, magnetic pickup, etc...).

S07 SENSOR CONFIGURATION

RESISTIVE AND 0-5V INPUT SETUP


This menu is used to configure the display frequency input for RPM readings.

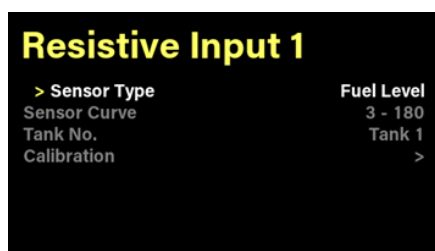

INPUT SELECTION

Once accessed the menu for the analog port where the sensor is connected, it is possible to configure all the parameters such as:


- Sensor Type
- Sensor Calibration
- Instance

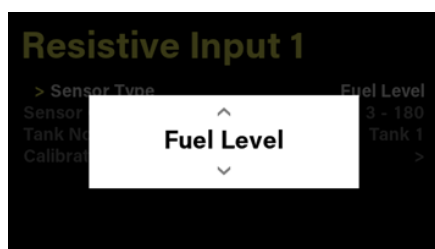

CHOOSE THE SENSOR TYPE

Access the "Sensor Type" menu to select the type of sensor that is connected to the analog port (Fuel Sensor, Temp Sensor, etc...)

Consult the "Supported Data" table to check which sensor types are supported.

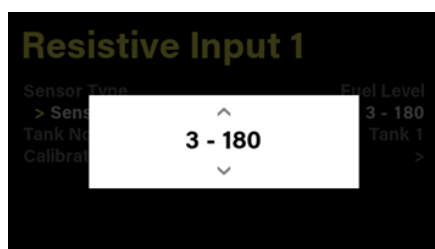

SELECT THE SENSOR CURVE

Once defined the sensor type, it is required to select its characteristics.

The display lists some standard configurations (see "Standard Calibrations" table), and a "Custom" option in case the sensor used is not available in the list.

If the "Custom" option is selected, it is required to perform the calibration (see step 5).





CONFIGURE THE INSTANCE

To correctly display the sensor data, it is needed to define an instance for the sensor, such as the tank number for a level sensor, or the engine number for an engine sensor.

This setup also ensures that the sensor data is also correctly transmitted on the NMEA 2000 network, if the gateway function is active.

S07 SENSOR CONFIGURATION

CALIBRATE THE SENSOR

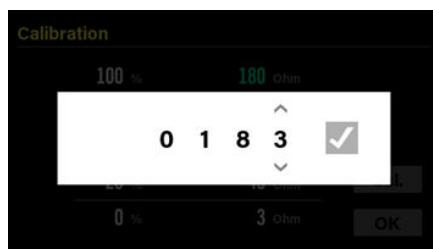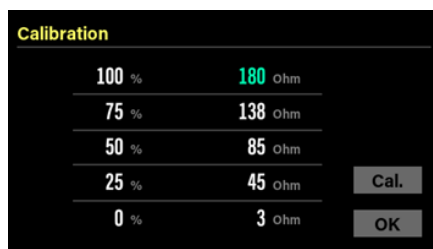

For a more precise calibration of a standard sensor, or in case the sensor used is not listed, it is possible to input a manual calibration, by using the sensor datasheet.

By accessing the “Calibration” menu the current sensor calibration will be displayed in a table of 5 points.

On the left side the displayed value is shown (e.g. 100% tank level), while on the right side the correspondent sensor output for that level (e.g. 180 Ohm).

Use the UP / DOWN buttons to select the value to be edited, the current selected value will be highlighted in green color.

Press ENTER on the value to be edited and input the correct value and press (?).

Once the table is fully customized press OK to save the custom configuration.

STANDARD CALIBRATIONS

Sensor	Calibration options (Resistive inputs)	Calibration options
(0-5V input)	Enable or disable the input.	
Fuel Level		
Fresh / Waste / Black Water Levels	3 – 180 Ω	0 – 5 V linear
	240 – 33 Ω	
	90 – 0.5 Ω	
Trim	167 – 10 Ω	0 – 5 V linear
Rudder	10 – 180 Ω	0 – 5 V linear
	5 – 90 Ω	
Coolant Temp	291 – 19 Ω (120°C)	0 – 5 V linear
Engine Oil Temp	291 – 19 Ω (150°C)	0 – 5 V linear
Engine Oil Press	10 – 184 Ω (5 bar)	0 – 5 V linear
	10 – 184 Ω (10 bar)	
Trans Oil Temp	291 – 19 Ω (150°C)	0 – 5 V linear
Trans Oil Press	10 – 184 Ω (25 bar)	0 – 5 V linear
	10 – 184 Ω (30 bar)	
Boost Press	10 – 184 Ω (2 bar)	0 – 5 V linear

S07 SENSOR CONFIGURATION

TANK SENSORS LIVE CALIBRATION

For tank sensors (Fuel / Fresh / Waste / Black Water Level) it is possible to perform a "live" calibration with a step-by-step process that will result in a fine-tuned calibration for the actual tank.

Make sure the tank is empty before starting the calibration process and be prepared to fill the tank in five steps follow the on-screen instructions.



The screen displays a table with two columns: percentage and resistance in Ohms. The values are: 100% (180 Ohm), 75% (138 Ohm), 50% (85 Ohm), 25% (45 Ohm), and 0% (3 Ohm). A 'Cal.' button is next to the 25% row, and an 'OK' button is at the bottom right.

100 %	180 Ohm
75 %	138 Ohm
50 %	85 Ohm
25 %	45 Ohm
0 %	3 Ohm


While displaying the sensor calibration table (see step 5 above) select the "Cal." button to enter the step-by-step calibration process.




The screen shows 'Tank Calibration' with a vertical bar at 0%. It prompts 'Fill Tank with: 0 L' and shows a 'Live Value' of 5 Ohm. A 'SET' button is at the bottom right.

Fill Tank with:	0 L
Live Value	5 Ohm

With the tank empty (1st step) wait for the sensor reading to stabilize.
The sensor reading is displayed as "Live Value" in the screen.

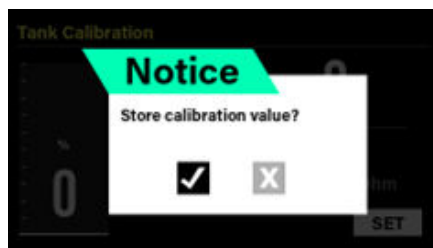

Once the value is stable press the "SET" button to confirm the reading.
A popup message will ask to confirm the reading, press OK to go to the next step.

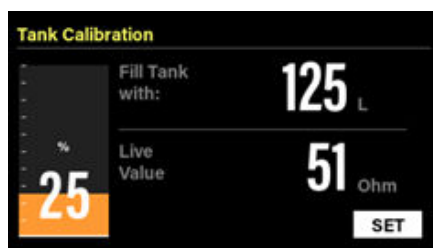


The screen shows 'Tank Calibration' with a vertical bar at 25%. It prompts 'Fill Tank with: 125 L' and shows a 'Live Value' of 51 Ohm. A 'SET' button is at the bottom right.

Fill Tank with:	125 L
Live Value	51 Ohm

Now fill the tank at 25% and again wait for the sensor reading to stabilize.
If the capacity of the tank has been set in the Setup menu, the display will notify the exact amount of liquid to fill the tank with.

Once the reading is stable press "SET" and confirm the reading by pressing OK in the confirmation popup.

Repeat steps 4 and 5 by filling the tank each time by the quantity indicated by the display.

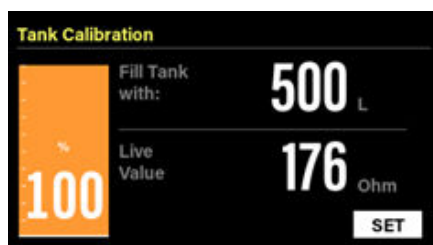

The screen shows 'Tank Calibration' with a vertical bar at 100%. It prompts 'Fill Tank with: 500 L' and shows a 'Live Value' of 176 Ohm. A 'SET' button is at the bottom right.

Fill Tank with:	500 L
Live Value	176 Ohm

Once the 5 steps are completed, the display will show the newly calibrated table as overview.

Press OK to confirm the calibration.


ALARMS

ALARM / WARNING NOTIFICATION


The Si-5 display can display warnings and alarms either triggered locally or received from CAN interfaces.

In the event of an alarm, the display acts as follows, independently of the actual operation:

- An alarm/warning popup appears with alarm name / information and icon
- The related alarm icon is displayed in the notification bar
- The alarm output is activated, if configured
- The active alarm, including additional information, is visible on the Active alarms screen
- If supported and configured, the alarm is transmitted to the NMEA 2000 network

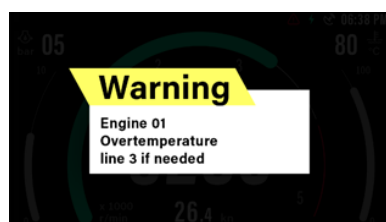


WARNING POPUP

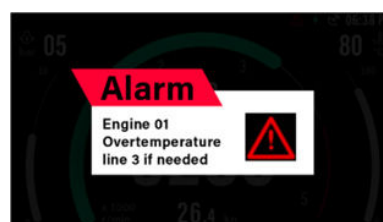

ALARM POPUP

ALARM AND WARNING ICONS

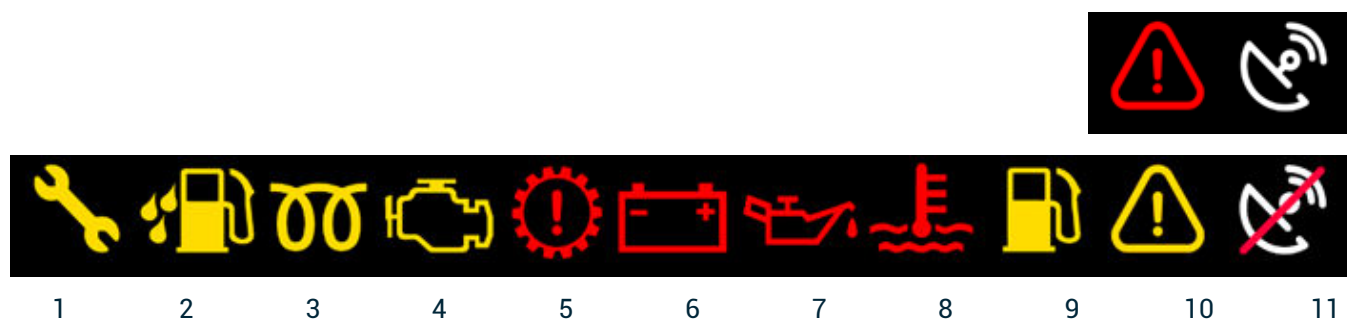

Icon	Description
1	Service Maintenance
2	Water In Fuel
3	Preheat Indicator
4	Engine Alarm (MIL)
5	Transmission Alarm
6	Battery Alarm

Icon	Description
7	Engine Oil Alarm
8	Coolant Temp Alarm
9	Low Fuel Indicator
10	Generic Warning (amber) Generic Alarm (red)
11	GPS and No-GPS Icon


S08 ALARMS

ALARM SNOOZE

When the popup is displayed after an alarm has occurred, it is possible to dismiss it by pressing the ENTER button.

By dismissing the popup, the alarm output is also deactivated.
The related alarm icon in the notification bar will remain as a reminder of the active alarm, as long as the alarm is active.

If the Snooze sync function is active in the Alarm menu, the popup and the alarm output are also dismissed on other Si-5 displays present on the NMEA 2000 network.

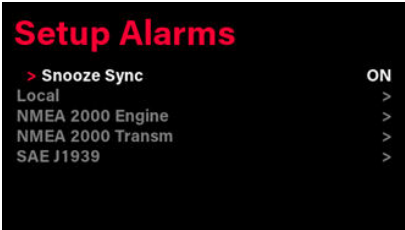

ACTIVE ALARMS

All the currently active alarms are listed on this screen.


S08 ALARMS

SETUP A LOCAL ALARM


A local alarm is an alarm that is set and triggered by the Si-5 display itself when a user-defined threshold is reached.

For each alarm it is possible to activate the alarm output.


1. Access the Alarm -> Setup Alarms -> Local menu.
The list of supported local alarms is displayed (see "Supported Local Alarms" table).

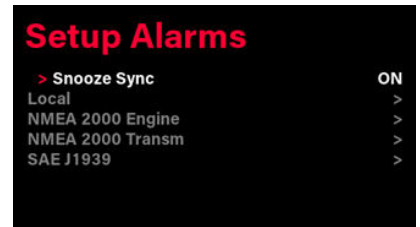

2. Choose the alarm to be set and press ENTER.

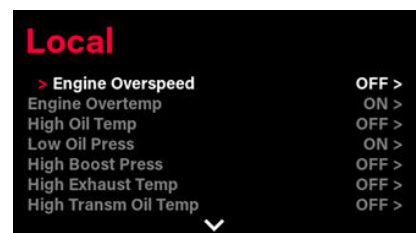


3. Activate the alarm by setting Enabled -> ON.

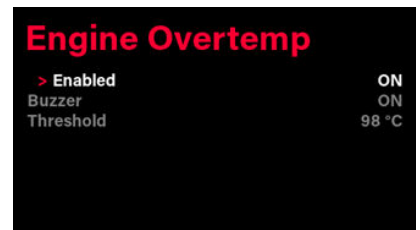

4. If the alarm output is required for the alarm, activate it by setting Buzzer -> ON.

5. Define the alarm threshold as last step and press OK when done.
The alarm threshold is defined with the same unit as configured in the "Units" menu.

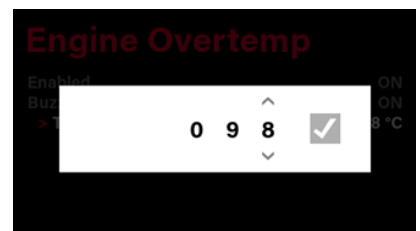

NOTE: The value used to activate the alarm is the same value defined for displaying the data (see "Source Selection").

Local alarm gateway on NMEA 2000

If the NMEA 2000 gateway is activated (see "NMEA 2000 gateway") the alarm (when active) is also transmitted on the NMEA 2000 network, if the NMEA 2000 protocol supports it.

S08 ALARMS

SUPPORTED LOCAL ALARMS

Group	Alarm	NMEA 2000 output
Engine	Engine Rev Limit	Yes
	High Coolant Temp	Yes
	High Oil temp	Yes
	Low Oil pressure	Yes
	High Boost Press	Yes
	High Exhaust temp	Yes
	High Trans Oil temp	Yes
	Low Trans Oil pressure	Yes
	Low Fuel pressure	Yes
	High engine load	Yes
	Maintenance	Yes
Tanks	Low Fuel	No
	Low fresh water	No
	High grey water	No
	High black water	No
Battery	Low voltage	Yes
	Overvoltage	No
	Low Battery SOC	No
	Battery temperature	No
	Low autonomy	No
Navigation	Shallow water	No
	High depth	No
	Boat speed	No
GPS	Signal lost	No

Factory default = All alarms OFF.

NOTE: To avoid wrongful detection of engine alarms, all the alarms under the "Engine" group, excluding the Service Notification, are only detected with RPM higher than the idling speed defined in Setup Engine Idle Speed (engine running).

S08 ALARMS

SERVICE NOTIFICATION

Within the local alarms it is possible to set up engine service intervals to get a notification when this interval is elapsed.

The service interval is expressed in hours, and it uses the engine hours as base counter for the calculation.
The engine hours data used for this calculation is the one defined in the "Data Sources" menu.

Only one service interval setup is supported, which is valid for each engine in case of multiple engines.

Setting	Possible values
Enabled	ON / OFF
Interval	1 to 500 h

Factory default = OFF

When the service interval expires, a warning popup is displayed at every power on of the display, like a standard warning notification.

The amber warning telltale is also displayed in the notification bar.




When active, the notification can be reset though the Setup -> Reset Service menu.
The counter is then reset to the "Interval" defined.

S08 ALARMS

CONFIGURE NMEA 2000

Similarly to the local alarms, it is possible to activate alarms receive from the NMEA 2000 interface.


1. Access the Alarm -> Setup Alarms -> NMEA 2000 Engine (or Transmission) menu.
The list of supported local alarms is displayed (see "Supported CAN Alarms" table).

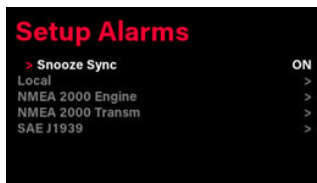

2. Choose the alarm to be set and press ENTER.



3. Activate the alarm by setting Enabled -> ON.

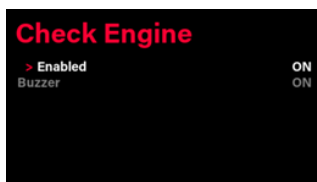

4. If the alarm output is required for the alarm, activate it by setting Buzzer -> ON.


CONFIGURE J1939 ALARMS

Similarly to the local alarms, it is possible to activate alarms receive from the SAE J1939 interface.

1. Access the Alarm -> Setup Alarms -> SAE J1939 menu.
The list of supported local alarms is displayed (see "Supported CAN Alarms" table).



2. Choose the alarm to be set and press ENTER.

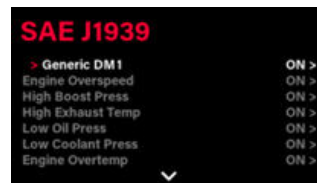

3. Activate the alarm by setting Enabled -> ON.



4. If the alarm output is required for the alarm, activate it by setting Buzzer -> ON.

J1939 alarm gateway on NMEA 2000

If the NMEA 2000 gateway is activated (see "NMEA 2000 gateway") the alarm (when active) is also transmitted on the NMEA 2000 network, if the NMEA 2000 protocol supports it.

SUPPORTED CAN ALARMS

NMEA 2000 Alarms Engine (PGN 127489)

Check engine
Over temperature
Low oil pressure
Low oil level
Low fuel pressure
Low system voltage
Low coolant level
Water flow
Water in fuel
Charge indicator
Preheat indicator
High boost pressure
Rev limit exceeded
EGR system
Throttle position sensor
Engine emergency stop
Warning level 1
Warning level 2
Power reduction
Maintenance needed
Eng. com error
Sub or secondary throttle
Neutral start protect
Engine shutting down

NMEA 2000 Alarms Transmission (PGN 127493)

Transm. Check transmission
Transm. Over temp
Transm. Low oil pressure
Transm. Low oil level
Transm. Sail drive

SAE J1939 Alarms (DM1)

Generic DM1
Engine speed
Boost pressure
Exhaust gas temperature
Engine oil pressure
Engine coolant pressure
Engine coolant temp
Engine oil temp
Transmission oil press
Transmission oil temp
Fuel Pressure
Fuel Level
Water in fuel

SPECIFICATIONS

GENERAL FEATURES	
Display	4.3" IPS TFT display with transmissive layer technology 480x272 pixels resolution
Front Lens	Mineral glass with antiglare coating
Housing	Ø 85 mm round panel cut-out Flame-retardant reinforced resin
Connectors	<ul style="list-style-type: none"> • Molex MX150 12 pins "A" coding • M12 5 pins "A" coding (NMEA 2000) • M12 5 pins "D" coding (Ethernet) • AMP SuperSeal 1.5 Series (on harness)
Analog ports	<ul style="list-style-type: none"> • 1x Frequency input • 2x Resistive inputs • 1x Voltage input (0-5 V)
Network interfaces	<ul style="list-style-type: none"> • NMEA 2000 • SAE J1939 • EasyLink • Ethernet
ENVIRONMENTAL FEATURES	
Operating temperature	From -20 to +70 °C
Storage temperature	From -40 to +85 °C
Protection Class	IP X7 front and rear acc. To IEC60529 "Exposed Device"
ELECTRICAL FEATURES	
Rated voltage	12V / 24V DC
Operating voltage	9V / 32V
Current consumption	< 300 mA @ 12 V with max backlight intensity 100mA for each EasyLink satellite gauge

DISPOSAL RESPONSIBILITY



Dispose of by separate collection through government or local government designated collection facilities.
Proper disposal and recycling will help prevent potentially negative consequences for the environment and people.

NOTES

S10 CARE

CARE

Do not clean the unit with any type of aggressive cleaner such as acetone or other solvent. Use only a soft non flint cloth with some liquid soap and wipe off the glass surface.

In the same manner, never attempt to dip the whole unit in any form of cleaner. In doing so, the cleaning solution would enter in the unit via the connectors orifices.

NOTES



NANNI INDUSTRIES S.A.S.

11, avenue Abbé Mariotte

33260 La Teste de Buch

France

TEL +33 (0) 556 22 30 60

www.nannienergy.com

NANNI SRL

Via degli Olmetti, 44/A

00060 Formello – Roma

Italia

TEL +39 06 30 88 42 51

www.nannienergy.com

